

# In-Wall Installation Instructions


## (SINKMIŞER Shower Installation)



The SINKMIŞER (on the back) has four ports.

The one ports is for the hot water input, and is positioned separate from the other three.

The other set (three ports) are your output ports, and are positioned together on the very bottom of the valve.

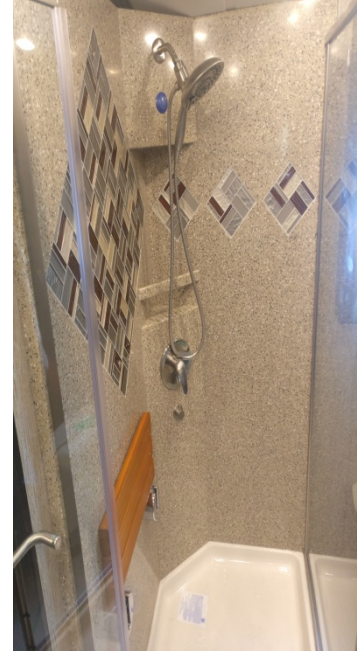

### **The three outputs are as follows (order can be changed).**

- 1) The center port goes straight up to the shower head.
- 2) The right port goes to the input to either of the 1/2" sides of the provided clear plastic tee. The other side of the tee goes to your return line back to your storage tank..
- 3) The Left port can be capped off or attached to a hand wand, body spray unit, tub spout or other shower attachment.

**The handle side goes through the shower wall (25/32" hole) where the blue mushroom cap (Provided in the kit) is installed per the enclosed instructions.**

### **Magic Mushroom installation onto Aqua View Tee**

- 1) Screw 3/4" Lock Nut onto 3/4" male thread of the Tee. Make sure the flat side is facing out toward end of the threads. Screw it all the way down until it stops.
- 2) Slide Rubber washer over 3/4" threads and press against lock nut.
- 3) Then wrap 2 to 3 turns of Teflon tape on the 3/4" end of the Tee.
- 3) Insert Tee into predrilled 1 3/8" hole in shower wall.
- 4) Screw Magic Mushroom onto the 3/4" Thread. Turn Magic Mushroom until snug then turn slightly more until Aqua View logo is horizontal to the shower floor. **HAND TIGHTEN ONLY!**
- 5) Screw 3/4" Lock nut toward shower wall until snug against the back side of wall. **HAND TIGHTEN ONLY!**

